

A U S T R A L I A N

# BULK HANDLING


R E V I E W

[www.bulkhandling.com.au](http://www.bulkhandling.com.au)

Volume 15 No 4

May/June 2010

- Launch of Australian Conveyor Research Association
- Belt rip prevention and detection
- Getting belt scrapers right
- Powder handling feature
- Sponsors confirm for Bulk Handling Awards – 11th November, 2010, Brisbane
- Technical paper: DEM simulation of a conveyor impact-plate transfer
- Suppliers news and new products

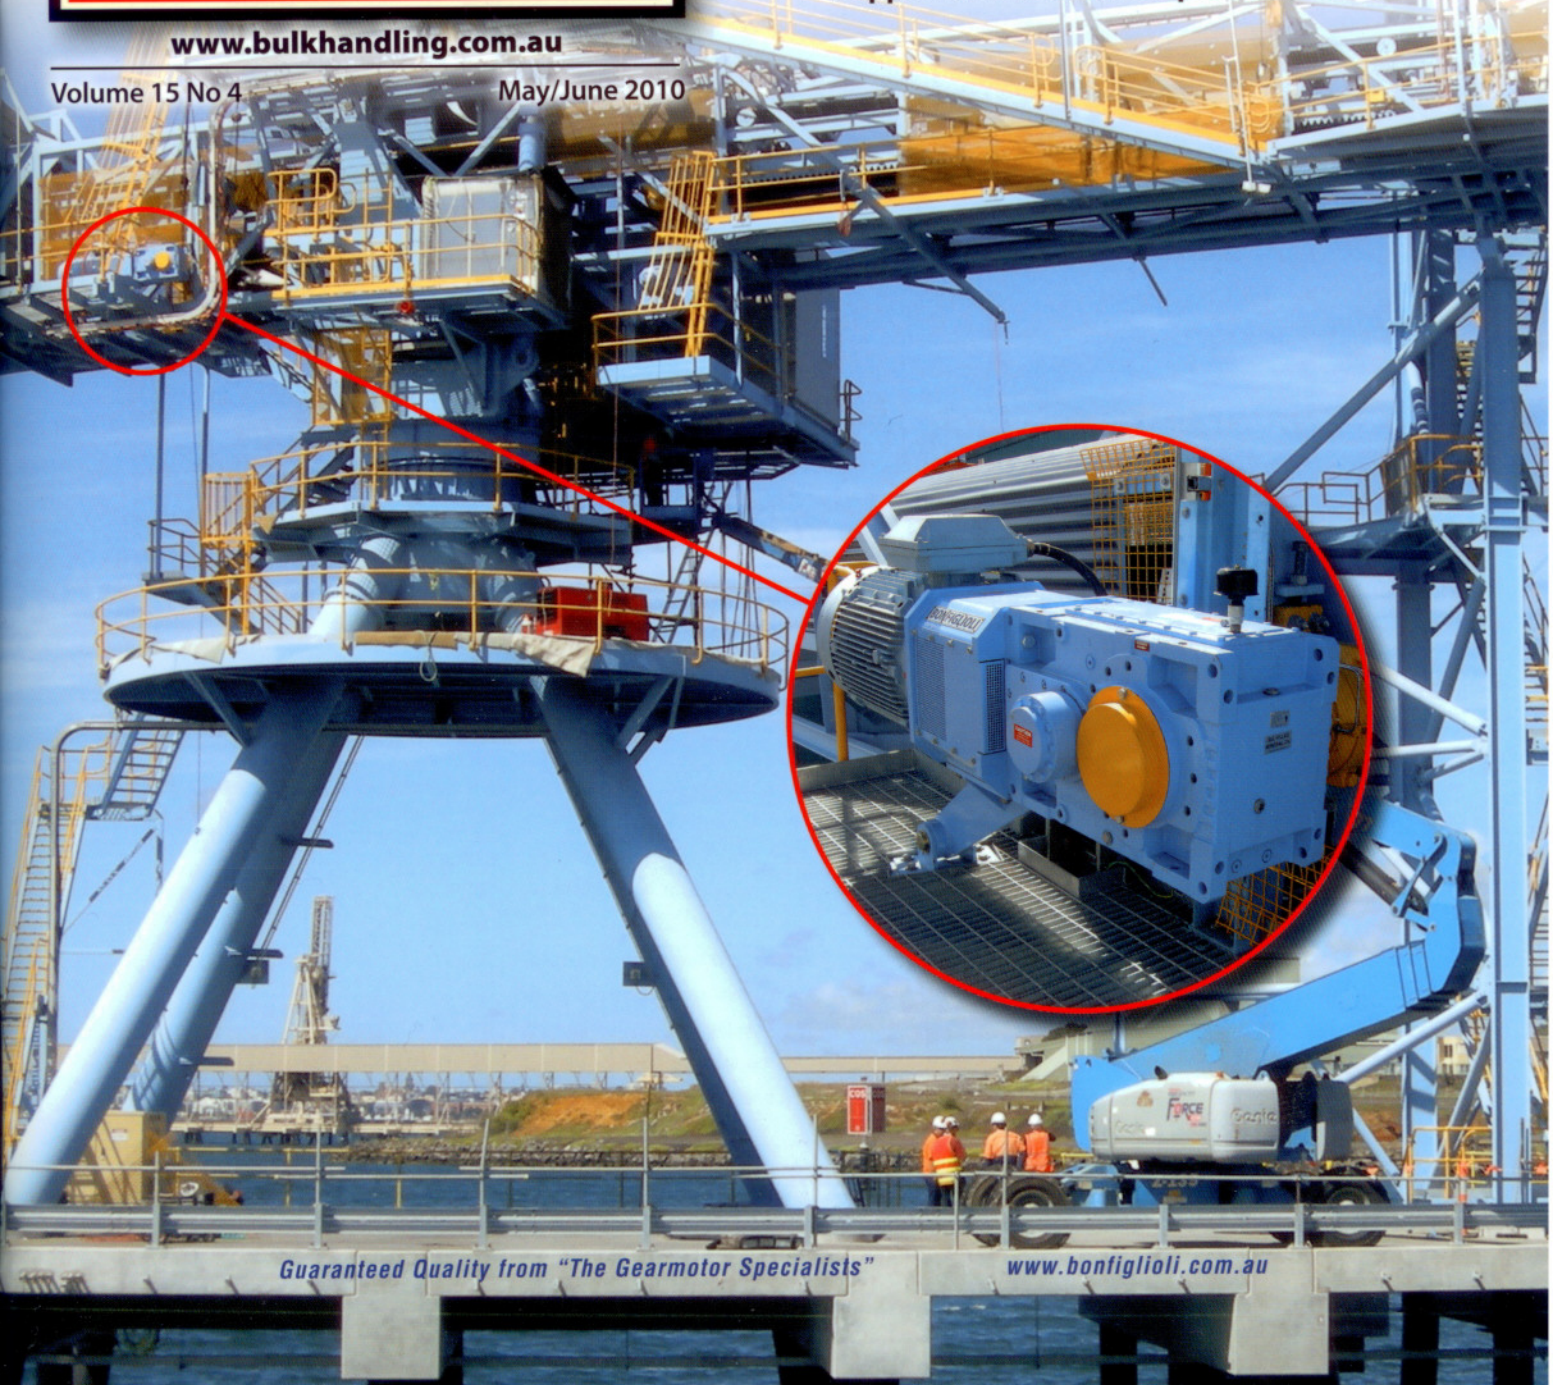

Guaranteed Quality from "The Gearmotor Specialists"

[www.bonfiglioli.com.au](http://www.bonfiglioli.com.au)




**BONFIGLIOLI**

TRANSMISSION AUSTRALIA

MORE TORQUE

MORE ACTION

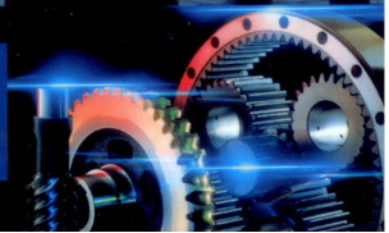



*Pro-X Nutraceuticals manufactures and packages vitamins, dietary supplements and herbals from dry powders.*

## Mixer aids powder handling at nutraceutical plant

Pro-X Nutraceuticals has tripled mixing capacity and reduced labor and waste with a rotary batch mixer from Munson Machinery.

A former athlete and body builder named Rod Burren searched for non-pharmaceutical supplements to enhance his physical condition but none met his quality requirements, prompting him to develop and personally test his own formulations.

Based on the health benefits he experienced, Burren started a company in 1994 called Roex Inc. that used contract manufacturers and packagers to commercialise his formulations. In 2004 he added a division called Pro-X Nutraceuticals and brought manufacturing and packaging in-house. Roex has since become a multi-million dollar manufacturer of vitamins, dietary supplements and herbals. The company is growing so rapidly that production manager Kory Seitz realised that demand would soon exceed the capacity of the company's only mixer, a 0.85 cubic-metre ribbon blender located in the Irvine, California, facility.

The mixer was a bottleneck to the operation due to its small size, requiring that each batch be split up, requiring extra labor for feeding, weighing, discharging and cleaning. "We were constantly splitting up batches, sometimes doing several batches to fill an order for a single product. We had to find a larger blender to keep pace with our process of making tablets, capsules and blends from dry powders," said Seitz.

In addition to increasing capacity, Pro-X wanted to comply with the US Food & Drug Administration's Good Manufacturing



Practices (GMP) by installing a stand-alone blender in a separate room that would include a load-bearing structure onto which bins of material would be forklifted and emptied into a hopper over the blender intake.

After considering V-blenders and rotary batch mixers, the company installed a 3.1 cubic-metre 700 TS 110 stainless-steel rotary batch mixer from Munson Machinery, Utica, New York.



Bags of raw material forklifted to the mezzanine level are manually dumped through a screen (left of operator) into a rotary batch mixer located in the room below, in compliance with US FDA's Good Manufacturing Practices.

Whereas the original ribbon blender has a capacity of 650 kilos, the rotary batch mixer handles up to 2,000 kilos, allowing Pro-X to triple mixing capacity. The company also realised unexpected benefits in the form of reduced labour, shorter blending cycles, ease of cleaning and minimised waste.

### Eliminating extra steps and associated labor, downtime

"Think of the productivity gains in being able to mix once versus three times," said Seitz. "Not only are we mixing fewer times, but labour for weighing, screening and staging prior to mixing has also been reduced."

When an order comes into the Pro-X facility the appropriate raw material powders are selected and inspected for quality, screened, weighed and sent to an area where they are staged for blending. "Certain items need special treatment," explained Seitz. "Some herbal mixtures are too big and need to be ground, while other materials need to be oscillated to reduce clumps."

"When running several batches to fill a single order, we were performing these tasks several times. Those tasks are done only once now."

The preparation stage ensures that materials become free-flowing and ready to enter the blending and grinding area. Since each raw material - anywhere from two to 50 powders per blend - has a different bulk density and its own "specific quirks," operators adjust for the differences by feeding the materials at different times.

"For instance, we add the excipients, materials, such as magnesium stearate, last to ensure that they are blended throughout the entire batch without affecting their function. If you over-



# BULKmetrix

## Providing material management and control solutions to the bulk handling industry

### Features:

**Task Management System** – High Level Planning Scheduling and Control of Operations

**Stockpile Management System** – Real Time 3D Visualisation and Machine Control

**Anti Collision System** – 3D display of machines and collision vectors with dynamic creation and processing of exclusion zones.

- Dynamic task oriented graphics user interface incorporating
  - Strategic focus on current operations
  - Hierarchical display and control structure
  - Zoom and drill down mechanisms for quick root cause identification and control
  - Real Time Inventory Updates and KPI reporting
  - SCADA Integration
- Integrated and seamless Database
- Production Time Monitoring and Reporting
- Automated Rail and Road In and Out Loading
- Storage Capacity and Inventory Management
- Product Blending, Quality Tracking and Management

At MatrixGroup we focus on what our clients really need to be successful. BULKmetrix can assist in transforming existing everyday operations into a real business advantage, every time.



MatrixGroup creates and delivers a bulk materials management and control system known as BULKmetrix. BULKmetrix offers a software solution that can be configured to suit your business needs.


**MATRIXGROUP**

Commodity Handling Solutions - The Industry Choice

Ph: 08 8444 5900 ■ Fax 08 8425 2296

Email: [general@matrixgroup.com.au](mailto:general@matrixgroup.com.au)

[www.matrixgroup.com.au](http://www.matrixgroup.com.au)

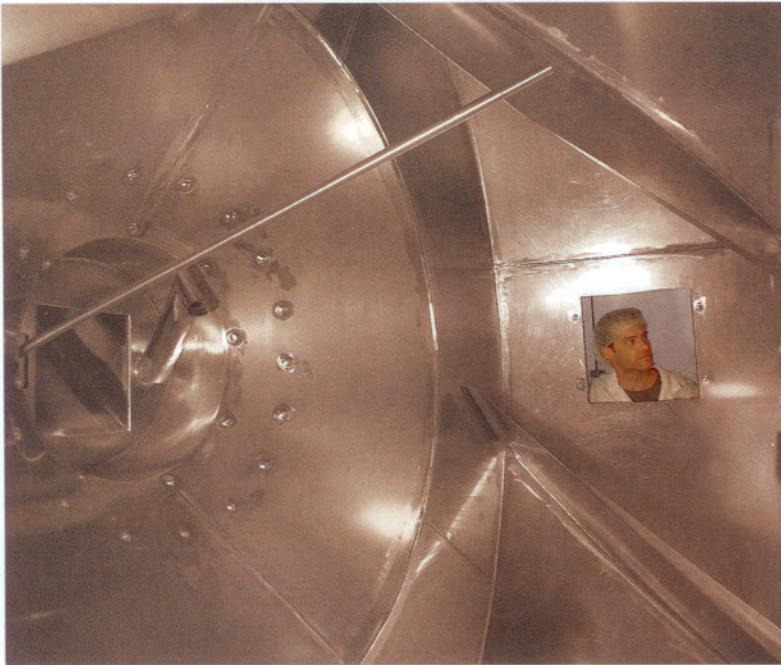

Rotating drum with proprietary mixing flights achieves total batch uniformity in less than three minutes.



Internal mixing flights elevate the material which is discharged through a plug gate valve into plastic-lined drums.

blend excipients, they will not produce the desired effect of a good flow of material, solid compression or anti-sticking, which they are intended to accomplish," said Seitz. "For every product there is a specific order to add materials to the blend to assist in creating a problem-free batch."

Once Pro-X formulators determine the sequence in which materials should be fed, each bin of material is forklifted to the top of the structure surrounding the blender where material is gravity discharged in the hopper and, in turn, into the blender which turns at approximately two RPM during feeding. "The hopper allows us to pour raw material into the blender at a rate of 50 kilos per minute," said Seitz.

"The ability to discharge material directly into the mixer via the hopper, cut labour by 75%," continued Seitz. "With the old blender, it took four to five hours to feed the powder by hand or using an auger conveyor."

### Achieving 100% uniformity

The mixer is capable of achieving 100% uniformity in less than three minutes, but Pro-X runs longer cycles to absolutely ensure uniform blends. Seitz said, "There are no moving parts inside the mixer, but the mixing flights attached to the interior of the rotating drum picks up the powder and move it to the front of the blender and then back over itself." Continuous rotation assures all materials remain in motion, preventing segregation of materials of varying bulk densities.

When mixing is complete, the blend is discharged from a chute into plastic-lined drums, each of which carries between 90 kilos and 120 kilos of powder, which the blender discharges in less than 20 seconds. "With 2,000 kilos of material, we need to fill about 20 of these barrels per batch," said Seitz. "The rapid discharge with minimal overflow has significantly increased our speed."

Filled barrels move down the line, where the product is again inspected, weighed and sent to the appropriate manufacturing areas for production of tablets, capsules or powders, which are then packed and shipped.

### Reducing residual waste increases yield, speeds cleaning

After discharge usually less than 500 grams of residue remain inside the mixer, according to Seitz. "Getting nearly 100 percent out of our blend increases revenue because we're dealing with expensive materials. With less waste remaining in the blender, we increase the yield of tablets, capsules and powders in the end."

Negligible amounts of material remaining inside the blender also simplify cleaning. "With the ribbon blender we had to open it, sweep the residual heel of material from the trough and remove and clean the seals and other moving parts. Since the rotary mixer has no internal moving parts, operators simply attach a hose inside, which sprays water while the mixer is running, removing any remaining powder. Next, operators spray a cleaning solution inside the blender, run it and wipe it down," said Seitz. "It's much faster and easier to clean than a ribbon blender."

While the ribbon blender is still used for batches under 500 kilos, Pro-X relies mainly on the rotary batch mixer. "Not only are we mixing more efficiently," said Seitz, "but the ability to drop powder down the hopper and discharge the blender with minimal waste is also saving time and money." ■

Contact: [www.munsonmachinery.com](http://www.munsonmachinery.com)